

martor


SECUNORM HANDY

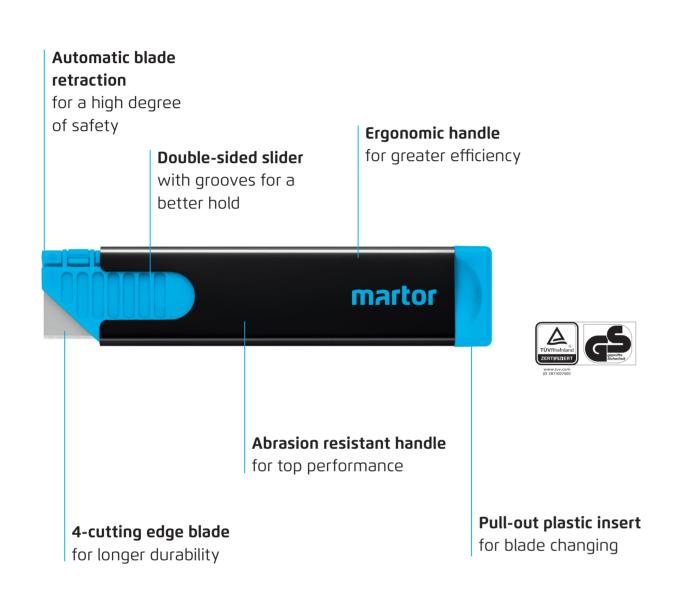


USAGE

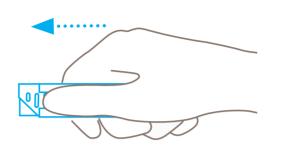


Use the slider to **engage the blade** for cutting.

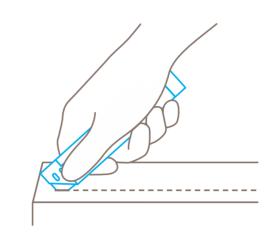

Pierce into the cutting material to cut.

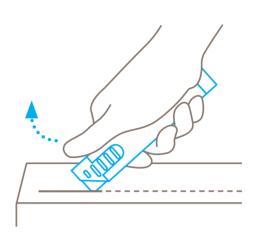


Always remove your **thumb from the slider** to For best results, cut plastic strapping band ensure automatic blade retraction.

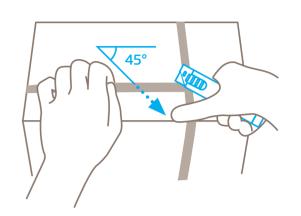


diagonally (at a 45° angle).


BLADE CHANGE

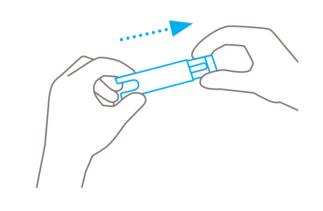


Pull plastic part out of handle's end. **Don't** pull the insert while holding onto the slider.

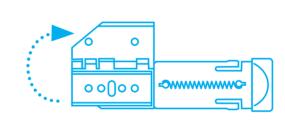

Open up the blade cover.

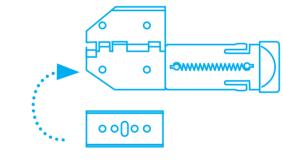


Reverse or replace the blade, make sure it fits **exactly** over the locating lugs.

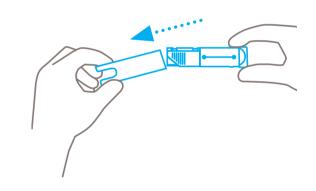


Finally, re-insert the plastic insert and blade fully into the handle.

PROTECTION OF USER

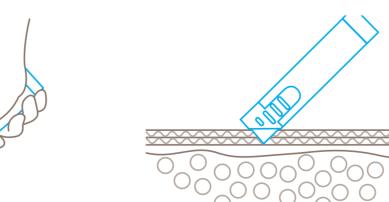


Following cutting, the blade immediately retracts into the handle. Condition: you have released hold of the slider.

PROTECTION OF GOODS

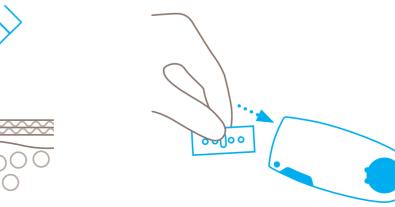


An appropriately **small cutting depth** serves to protect your goods.

DISPOSAL

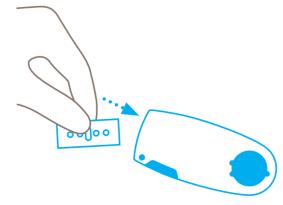

Your SAFEBOX is the best place to store used blades.

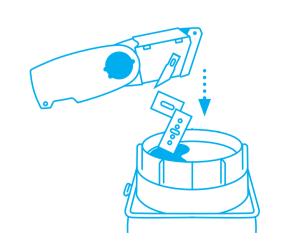

When the SAFEBOX is full, **empty all contents** into your USED BLADE CONTAINER.

Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.