

SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

martor

SECUNORM MIZAR



Automatic blade retraction
for a high degree of safety

Ergonomic handle
for greater efficiency

Recycled plastic (at least 50%)
as the handle's main material




Smooth, easy-to-squeeze lever
to release the blade


2-cutting edge blade
with a large cutting depth

3-in-1 activator
to lock, unlock, and change the blade


USAGE

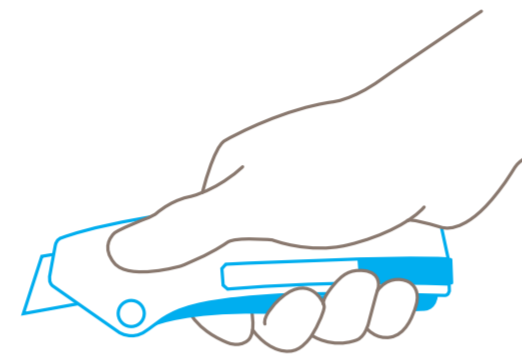


To **engage the blade**, unlock the cutter and squeeze the lever. Now you can cut.

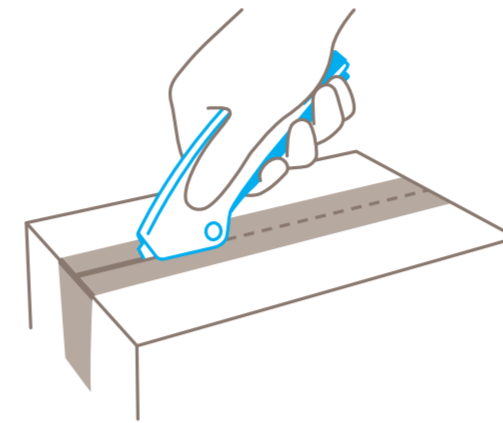

Use the underside of the cutter head as a supporting surface to **work ergonomically** and efficiently.

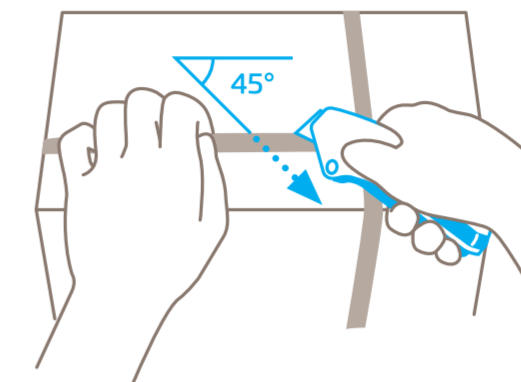


For best results, cut plastic strapping band **diagonally** (at a 45° angle).

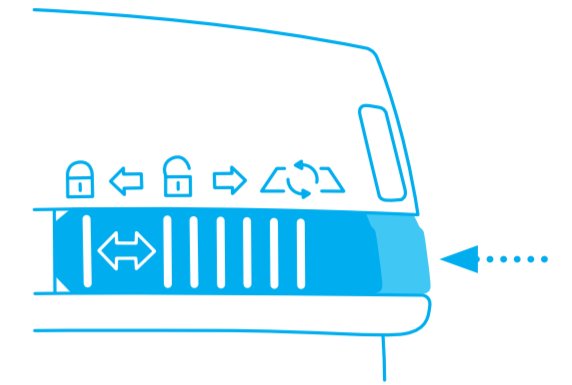


Use the 3-in-1 activator to **lock your cutting tool** after cutting.


BLADE CHANGE

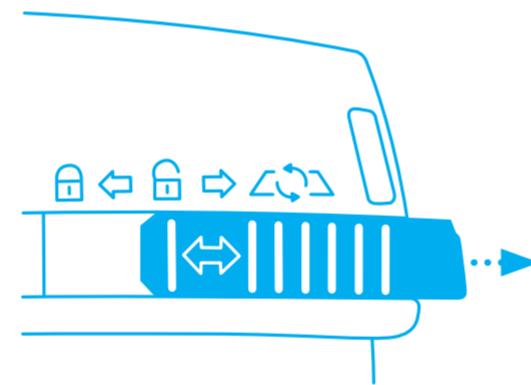


Move the 3-in-1 activator into its **rearmost position**.

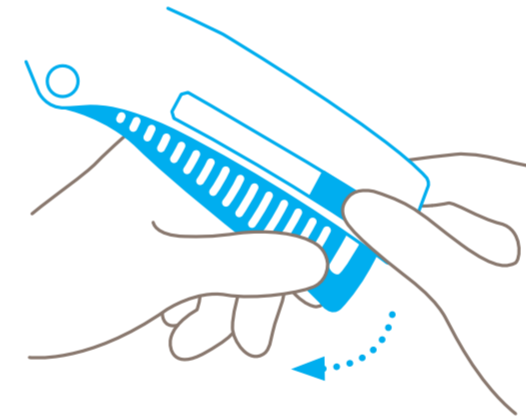

Swing the lever completely **out of the handle** and flip open the blade cover.

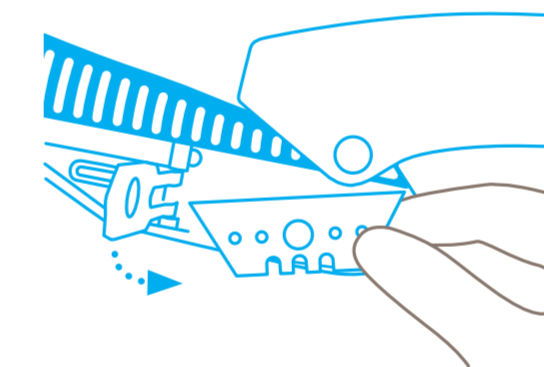


Now you can either **rotate or replace** the blade. Re-close the blade cover.

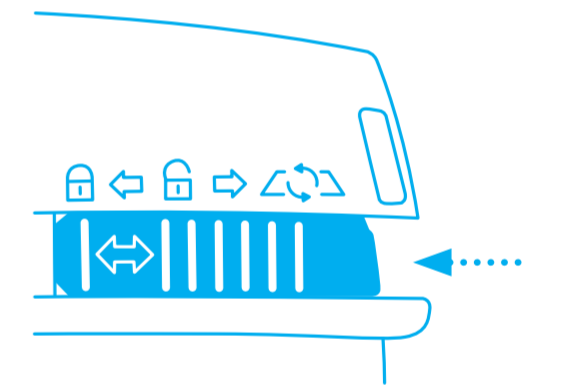


Swing the lever **back into the handle** and set the 3-in-1 activator to either lock or unlock.

PROTECTION OF USER

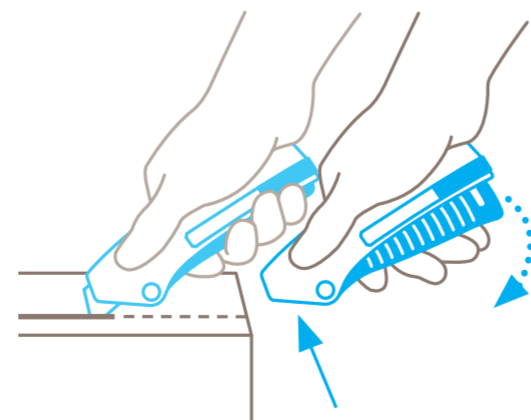


As soon as you **release the lever**, the blade disappears into the handle. And it stays there – until you engage it again.

DISPOSAL

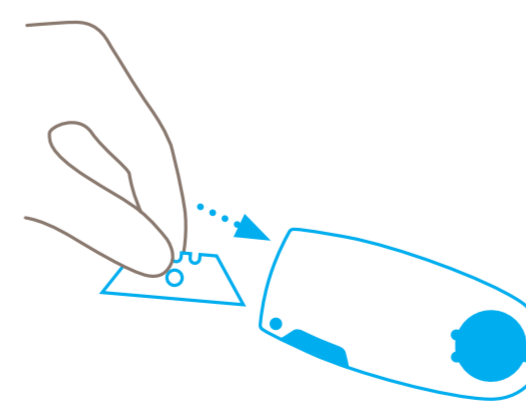

It is best to dispose of the **used blade** in your SAFEBOX.

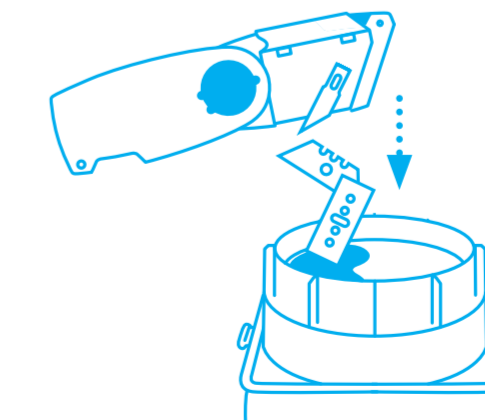

When the SAFEBOX is full, **empty all contents** into your USED BLADE CONTAINER.

Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.